

COLOR KINETICS INCORPORATED
10 MILK STREET, SUITE 1100
BOSTON, MA 02108 USA
TEL 888 FULL RGB
TEL 617 423 9999
FAX 617 423 9998
INFO@COLORKINETICS.COM
WWW.COLORKINETICS.COM

ITEM# 116-000002-00 (White)
116-000002-01 (Black)
116-000002-02 (Aluminum)

U.S. PATENTS 6,016,038, 6,150,774 AND 6,340,868
EUROPEAN PATENT 1,016,062
OTHER PATENTS PENDING

©2002 Color Kinetics Incorporated. All rights reserved. Chromacore, Color Kinetics, the Color Kinetics logo, ColorBlast, ColorPlay, iColor, iPlayer, and SmartJuice are registered trademarks, and ColorScope and QuickPlay are trademarks of Color Kinetics Incorporated.

PUB-000074-00 Rev. 00


Specifications subject to change without notice.



Introduction

Welcome to a more colorful world brought to you by Color Kinetics and Chromacore®, our patented core technologies that generate and control millions of colors and a variety of lighting effects using a microprocessor to control LEDs. This guide contains important information about installing and operating your new ColorBlast® 12 safely.

Fig. 1

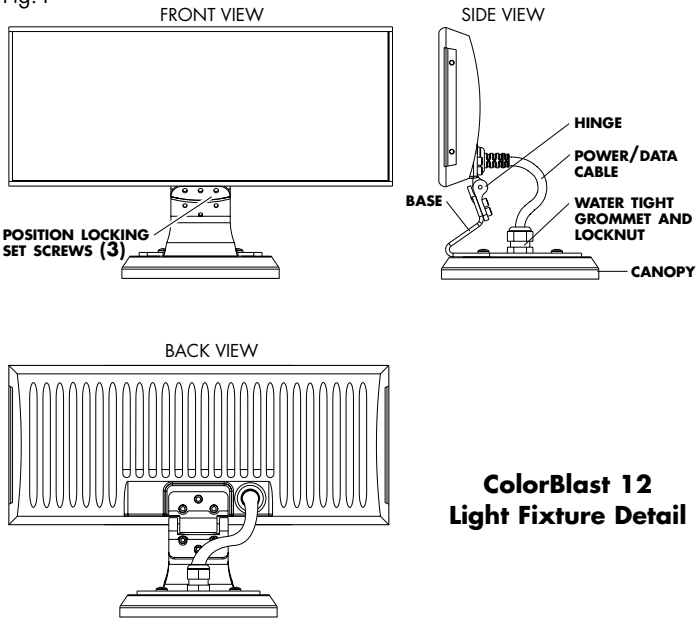

Included in this box:

- ColorBlast 12 with base
- Canopy
- Water-tight grommet assembly
- 2- fastening screws for indoor installation
- Swivel bracket for indoor installation
- Allen wrench
- Warranty and Registration cards
- Installation Guide

Additional items needed:

- 4" Electrical junction box (rated for your application) with 3.5" center to center distance for mounting locations.
- 24VDC power supply - PDS-150e (Item# 109-000008-01)
- Controller - Color Kinetics or DMX compatible
- Light addressing tool: Color Kinetics Zapi (Item# 103-000005-00, US/103-000005-01, EU) or Serial Addressing Software (SAS) with iPlayer 2 or Smart Jack 3
- Adjustable wrench
- Torque wrench

Scope of This User Guide

The goal of this user guide is to explain in an easily understood language the necessary steps to install ColorBlast 12 and assure peak performance. Its intended use is for reference only, by persons who are fully qualified. This document should never be considered a substitute for any provisions of a regulation or state and/or local code.

Identification and Warnings of Safety Hazards

In accordance with ANSI MH29.1 the following system of identifying the severity of the hazards associated with the products is used:

- “**DANGER**” Imminently hazardous situation which, if not avoided, will result in death or serious injury.
- “**WARNING**” Potentially hazardous situation that, if not avoided, could result in death or serious injury.
- “**CAUTION**” Potentially hazardous situation that, if not avoided, may result in minor or moderate injury or property damage.

DANGER: Ensure that main power supply is off before installing or wiring ColorBlast 12 and PDS-150e power supply. Failure to adhere to these instructions will result in death or serious injury.

WARNING: ColorBlast 12 and PDS-150e power supply must be installed by a qualified professional in accordance with NEC and relevant local codes. Failure to comply can result in death, serious injury, or property damage.

WARNING: Do not attempt to install or use ColorBlast 12 or PDS-150e until you read and understand the installation instructions and safety labels. Failure to adhere to these instructions could result in serious injury or property damage.

CAUTION: ColorBlast 12 has no serviceable parts. Do not attempt open the fixture. Doing so will result in property damage and void the warranty.

CAUTION: Do not modify, alter, or attempt to service the ColorBlast 12. Doing so will void the warranty.

CAUTION: Do not use sharp tools near or on the fixture lens. Doing so will result in property damage and void the warranty.

CAUTION: Do not hot swap. Ensure the power supply is off before connecting or disconnecting fixtures. Hot swapping will result in property damage and void the warranty

NOTE: The instructions and precautions set forth in this installation guide are not necessarily all-inclusive, all conceivable, or relevant to all applications as Color Kinetics cannot anticipate all conceivable or unique situations.

Owner/User Responsibilities

It is the responsibility of the contractor, installer, purchaser, owner and user to install, maintain, and operate ColorBlast 12 in such a manner as to comply with all state and local laws, ordinances, regulations, and the American National Standard Institute Safety Code

Plan the Installation

The nature of a ColorBlast 12 installation requires planning to ensure a timely, successful installation with minimal complications and down time.

Planning suggestions

When planning a ColorBlast 12 installation, Color Kinetics suggests doing the following:

- Consult a Electrical Inspector to approve all wiring plans.
- Refer to local and state codes for installation compliance.
- Create a Mapping Grid. Use this grid to record serial numbers for easy reference and addressing.
- Create a Layout Plan drawing, per Lighting Designer or Architect.
- Employ Color Kinetics Application Engineering Services.
- Get detailed wiring diagrams and additional support from <http://support.colorkinetics.com>.

Installation considerations

When creating your installation plan, consider the following:

- Location of PDS-150e in relationship to lights. Each ColorBlast 12 comes with a 60-foot power/data cable. Therefore, the PDS-150e must be located within 60 feet of the supported fixtures.
- Location of fixture and method of mounting. ColorBlast 12 can be installed indoors or outdoors on a wall, ceiling, or floor. Junction boxes and mounting methods vary according to location.

Installing ColorBlast 12

Steps to a successful installation:

1. Record serial numbers and identify fixtures as you unpack them.
2. Address the fixtures.
3. Install the power/data supplies.
4. Install ColorBlast 12 fixtures.
5. Connect power and data.

Record Serial Numbers

1. As you unpack the fixtures record the serial numbers.
Each ColorBlast 12 has a unique serial number programmed at the time of manufacture.
2. Write the serial numbers onto a Mapping Grid or use a bar code scanner along with Color Kinetics Serial Addressing Software to record each serial number.
Color Kinetics Serial Addressing Software and instruction are located at <https://support.colorkinetics.com>.
3. Using the Layout Plan, assign the fixture to a layout position in the installation.
4. Using a weatherproof label, identify the fixtures installation position based on the Layout Plan. Place the identifying label in an inconspicuous location noting the order or placement in the installation. This step not only minimizes installation mistakes, but aids in post-installation programming of your light shows.

Addressing the Lights

Important: Before you begin the installation, consider the scope of your lighting application and installation. Your ColorBlast 12 is set to light number one at the factory. If your application requires other addresses, you must set all light numbers before installing ColorBlast 12.

Set each serial number with a light numbers using one of the following methods.

ZAPI: Use Color Kinetics Zapi to set the light numbers for each fixture. Refer to the Zapi User Guide for step-by-step addressing instructions.

SAS: Use a PC with iPlayer 2, or a PC with Smart Jack 3 to address the fixtures. Download the Serial Addressing Software (SAS) and instructions from <https://support.colorkinetics.com>.

Setting Individual Addresses:

1. With power disconnected, connect up to three ColorBlast 12 fixtures to the PDS-150e.
2. Attach the DMX interface (Zapi, iPlayer 2, or Smart Jack 3) to the *DMX IN* port on the PDS-150e.
3. Connect power to the PDS-150e.
4. Use Zapi or Serial Addressing Software to set the light address.
5. Disconnect power and then disconnect the addressed ColorBlast 12 fixtures.
6. Repeat steps 1 through 5 for each fixture.
7. After all fixtures are addressed, disconnect the DMX interface.

NOTE: Serial addressing gives you the option of addressing multiple fixtures through a single power supply or multiple power supplies. Refer to the Zapi User Guide or SAS Instruction Guide for details.

Setting the Same Address to Multiple Lights:

1. With power disconnected, connect up to six ColorBlast 12 fixtures to the PDS-150e (one per terminal block).
2. Attach the DMX interface, Zapi, to the *DMX IN* port on the PDS-150e.
3. Connect power to the PDS-150e.
4. Use Zapi to set the light number. All ColorBlast 12 fixtures connected to the PDS-150e are addressed to the same light number simultaneously.
NOTE: If you are using Serial Addressing Software, you must address the fixtures individually.
5. Disconnect the DMX interface.
NOTE: For applications using multiple, daisy chained power supplies, you can address all lights in the chain by attaching Zapi to the first power supply in the series.

Install the PDS-150e Power/Data Supply

Following the Layout Plan, install the PDS-150e power/data supplies according to state and local codes. Refer to the PDS-150e Installation Guide for complete instructions.

Things to remember:

- Consult an Electrical Inspector to approve all wiring plans.
- PDS-150e must be located within 60-feet of the ColorBlast 12 fixtures.

WARNING: Ensure that the power supply is off before wiring or connecting fixtures to the PDS-150e. Failure to do so can result in serious injuries or death.


CAUTION: Never lengthen the ColorBlast 12 cable. Doing so will result in property damage and void warranty.

Assemble ColorBlast 12

ColorBlast 12 can be installed indoors or outdoors; on walls, ceilings, or floors; with or without the canopy. With exception to floor mount without canopy, ColorBlast 12 requires some assembly. Refer to Fig. 2

- 1. Separate the lock nut from the grommet assembly.
- 2. Insert the grommet through base, or base and canopy when canopy is used. Installation environment determines use of canopy.
- 3. Attach the lock nut below base/canopy and tighten to 33.2 lbf-in (3.75 N-m).
- 4. Insert cable through dome nut. (Loosen dome nut if necessary.)
- 5. Using a wrench, tighten the dome nut to create a water-tight seal. Tighten until the gap between the dome nut and fixed nut is 3/32-inch. Use the provided Allen wrench as gap gauge, measuring on the flats.

Fig. 2

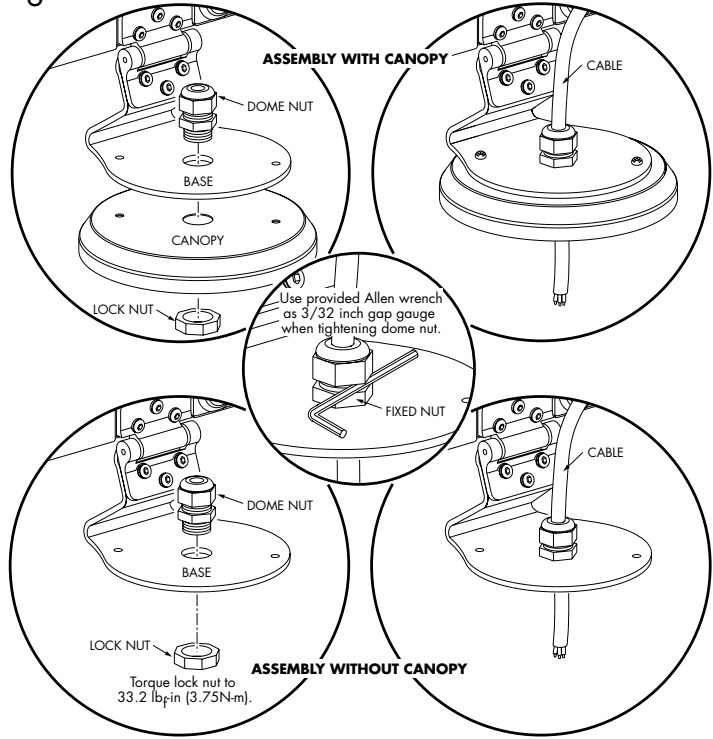

Install ColorBlast 12

This fixture shall be installed by a qualified electrician in accordance with NEC and relevant local codes for Class 2 power sources.

WARNING: Power must be off before installing the ColorBlast 12.

ColorBlast 12 can be installed indoors or outdoors. When mounting on walls and ceilings, use an electrical junction box rated for your application.

Indoor: Wall or Ceiling Mount


- 1. Attach the flat legs of the swivel bracket to the electrical junction box using the screws supplied with the junction box (See Fig. 3)
- 2. Insert the two fastening screws included with the Color Blast 12 through the holes in the base and canopy assembly, and then through the holes in the bent leg of the swivel bracket.
- 3. Rotate the light fixture to the desired position, then tighten the screws to secure in place.

Indoor: Floor Mount

When the light is used on a floor or other flat surface, you have the option of using it with or without the canopy.

- **With canopy:** In order for the canopy to sit level, the cable must not pass through the base plate and canopy. Assemble the fixture following Steps 1 through 3 of *Assembling ColorBlast 12*.
- **Without canopy:** The ColorBlast 12 comes ready to mount to a flat surface. No assembly is require. Do not pull cord through base plate.

Fig. 3

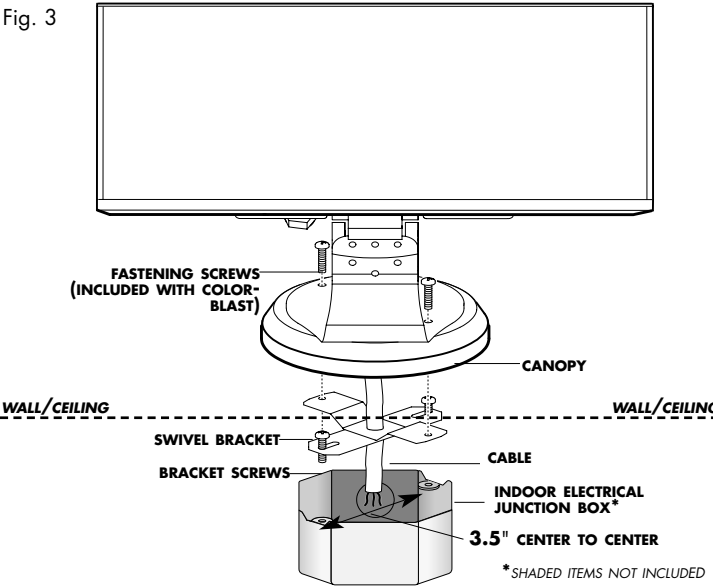


Outdoor: Floor Mount

When used outdoors, ColorBlast 12 must be mounted to a 4" electrical junction box rated for outdoor use.

- 1. To ensure a tight seal, do not use the canopy. Following the instruction in *Assembling ColorBlast 12*, attach the water-tight locking nut to the base plate, pull chord through, and tighten to seal.
- 2. Pull cable through junction box and conduit to PDS-150e.
- 3. Insert the outdoor mounting screws provided with the junction box through the ColorBlast 12 base plate, through the gasket, and then into the mounting holes on the junction box. Tighten the screws to hold the light in place. (See Fig. 4)

Fig. 4

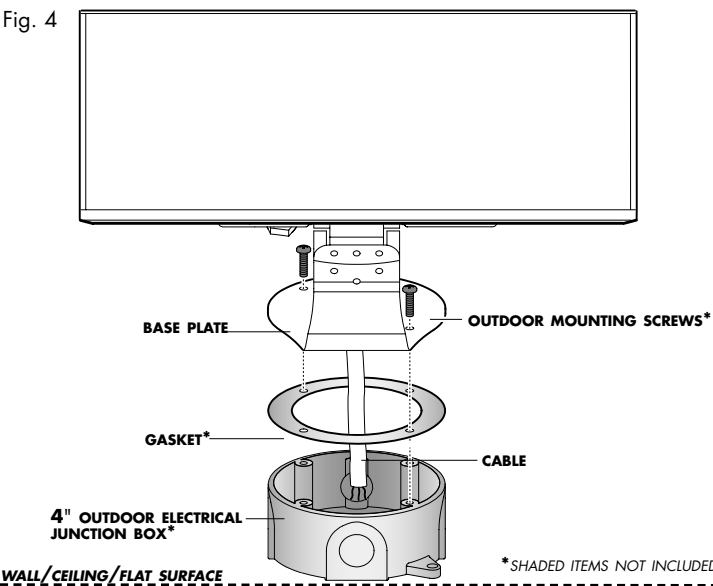

NOTE: Use the screws that come with the outdoor junction box. Do not use the screws that come with the ColorBlast 12.

Electrical Connections

The ColorBlast 12 is compatible with Color Kinetics PDS-150e.

Connecting Power

ColorBlast 12 requires 24 VDC. After installing the light fixtures, connect the power/data cable to the PDS-150e. Each PDS-150e supports three ColorBlast 12 fixtures. Wire one fixture per terminal group. (See Fig. 6)


CAUTION: Do not overload PDS-150e. Doing so will result in product failure and void the warranty.

NOTE: Each light must receive power directly from a power supply. You cannot daisy chain power from one ColorBlast 12 to another.

ColorBlast 12 cable contains three color-coded wires:


- Black = Common
- White = Data
- Red = +24 VDC

Fig. 5



CAUTION: You must use the cable provided with the unit. Use of other cables may result in light failure.

Fig. 6

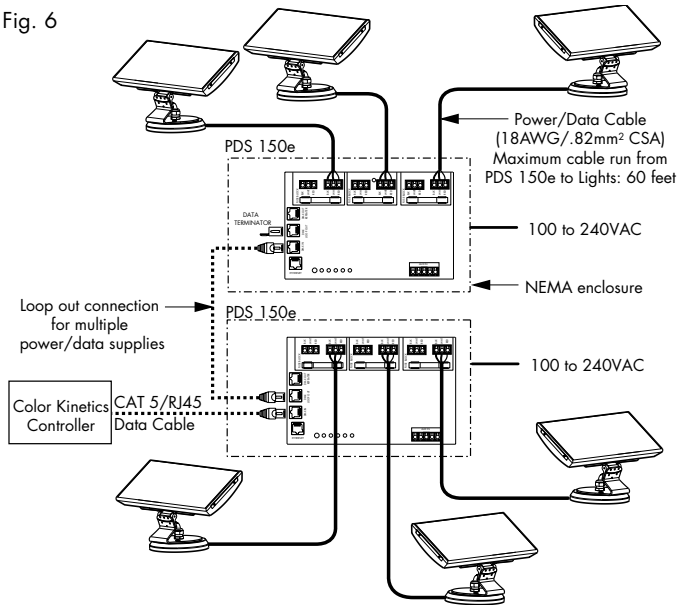

Important Information

Strobe Warning

There is some anecdotal evidence that strobe lighting may induce epileptic symptoms in certain susceptible individuals, although no associated product warnings have been issued by United States government according to the Food and Drug Administration.

If strobe lights are used, some international regulatory agencies¹ recommend keeping flicker rates at or below four flashes per second (as less of the flicker-sensitive population will then be at risk of an attack). This flicker rate applies only to the overall output of any group of lights in direct view. However, when more than one strobe light is used, the flashes should be synchronized. End users should also consider issuing a warning, alerting audience or viewers to the presence of strobe lighting.

Temperature Monitoring

For protection from extreme temperatures, the ColorBlast 12 has been designed with a temperature monitoring feature. If operating temperatures rise to an unsafe level, a compensation circuit is triggered and the ColorBlast 12 operation is interrupted causing the lights to turn dull red. After 30 minutes the lights will auto-cycle and return to full intensity.

To prevent additional power shut-downs, determine the cause of the overheating and correct the problem.

If any problems occur during usage, unplug the product immediately and call or email:

Color Kinetics Technical Support Group:
1-888-FULL RGB or 617-423-9999 or
support@colorkinetics.com

COLORBLAST 12 SPECIFICATIONS

COLOR RANGE	16.7 million (24bit) additive RGB colors Continuously variable intensity output range
SOURCE	High intensity powered LEDs
BEAM ANGLE	24° beam angle
DATA INTERFACE	Color Kinetics full line of controller products
FINISH	Black, white, or aluminum powder coated die cast aluminum housing
CONNECTORS	Unified power and data cable
LISTINGS	UL, CE, and IP66
POWER REQUIREMENT	50W
SOURCE LIFE	

Color Kinetics illumination products utilize high brightness LEDs as the illumination source. LED manufacturers predict LED life of up to 100,000 hours MTBF (mean time between failure), the standard used by conventional lamp manufacturers to measure source life. However, like all light sources, LEDs also experience lumen depreciation over time. So while LEDs can emit light for an extremely long period of time, MTBF is not the only consideration in determining useful life. LED lumen depreciation is affected by numerous environmental conditions such as ambient temperature, humidity and ventilation. Lumen depreciation is also affected by means of control, thermal management, current levels, and a host of other electrical design considerations.

Color Kinetics systems are expertly engineered to optimize LED life when used under normal operating conditions [ambient temperature: -4°F to 104°F (-20°C to 40°C), humidity: 0-95% non-condensing humidity, adequate ventilation and air volume] and when operated using typical color-changing effects. Long-term operation outside of these ranges or conditions, or at the upper limits of these ranges or conditions, may subject the product to further degradation of the LED source life, or in extreme cases, failure of internal components. Source life information is based on LED manufacturers' data, as well as other third party testing.

U.S. AND FOREIGN PATENTS AND PATENTS PENDING

Color Kinetics Incorporated grants the purchaser of its lighting products and controllers a personal and non-transferable license to use Chromacore®, its patented technology for networkable control of LED-based color changing lighting fixtures for illumination, display and design. This license is granted only by Color Kinetics Incorporated, and may not be transferred except by the grantor. The design, duplication, manufacture, or sale of other products using networkable control of LED-based color changing lighting may be prohibited and is not licensed hereunder. Other patents pending.

¹ Guide to Health, Safety and Welfare at Pop Concerts and Similar Events, HMSO Publications (UK)